
Signature CANOPY RANGE

Installation Guide

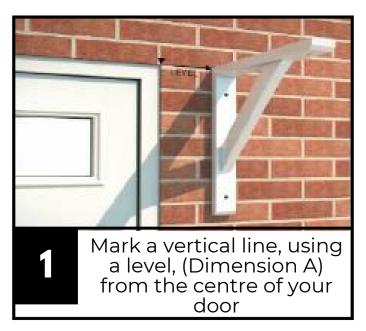



Hold a gallows bracket against the wall, at the required height, (normally just above the top of the door frame) so that the inner edge is on the line drawn.



3 Mark the bottom gallows bracket hole postion

Remove bracket and drill hole 10mm diameter 50mm deep



Hold bracket back in place and knock plug and screw through bracket in to drilled hole, partially tighten

Using sprit level ensure bracket is vertical and mark top hole

Move bracket to one side and drill top hole 10mm dia x 80mm deep

For dimensions see page 4

Signature CANOPY RANGE

Installation Guide

- Reposition bracket and knock plug and screw into place and tighten both screws
- Mark a vertical line on the wall on the other side of the door (Dimension B) from the inner edge of the fixed bracket
- 10
 Using a spirit level
 position the second
 bracket ensuring it is
 vertically
 straight and level with
 the first bracket
- Mark, drill and position second bracket as per instructions 3, 4 & 5



- Place the 2 halves of the canopy together on the floor ensuring they line up correctly and insert the 3 screws to hold the top edge of the canopy together
- Stick in place the top roof panel and ridge profile
- Carefully using 2 people lift the canopy on to the 2 fixed brackets to check every thing is lined up

For dimensions see page 4

Signature CANOPY RANGE

Installation Guide



Insert 2 screws through front edge of gallows bracket into the front canopy profile

Drill 2 holes through back face of canopy into the wall 10mm diameter 80mm deep, in an appropriate position to avoid mortar lines





Signature CANOPY RANGE

Installation Guide



(mm)	Dimension A (mm)	Dimension B (mm)
1040	520	1040
1217	608.5	1217
1394	697	1394
1570	785	1570
1747	873.5	1747
1924	962	1924