KORNICHE




Korniche Flat Glass

Deglazing Guide


REMOVE CORNER CAPS

1

Remove all corner caps from the unit

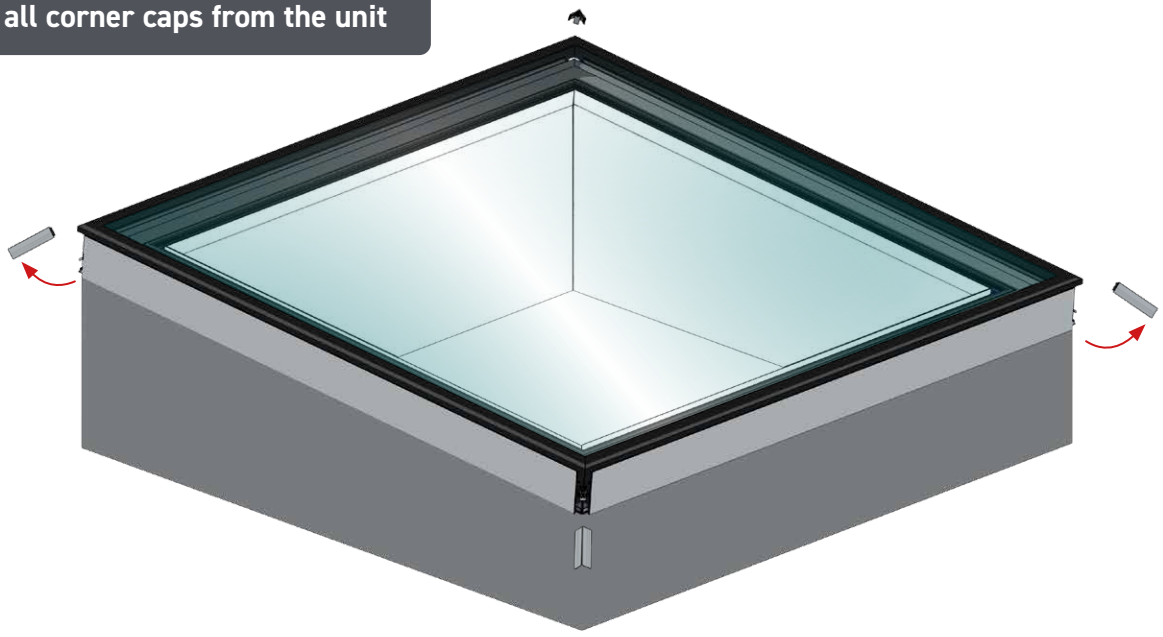

Rotate the bottom of the cap upwards to remove

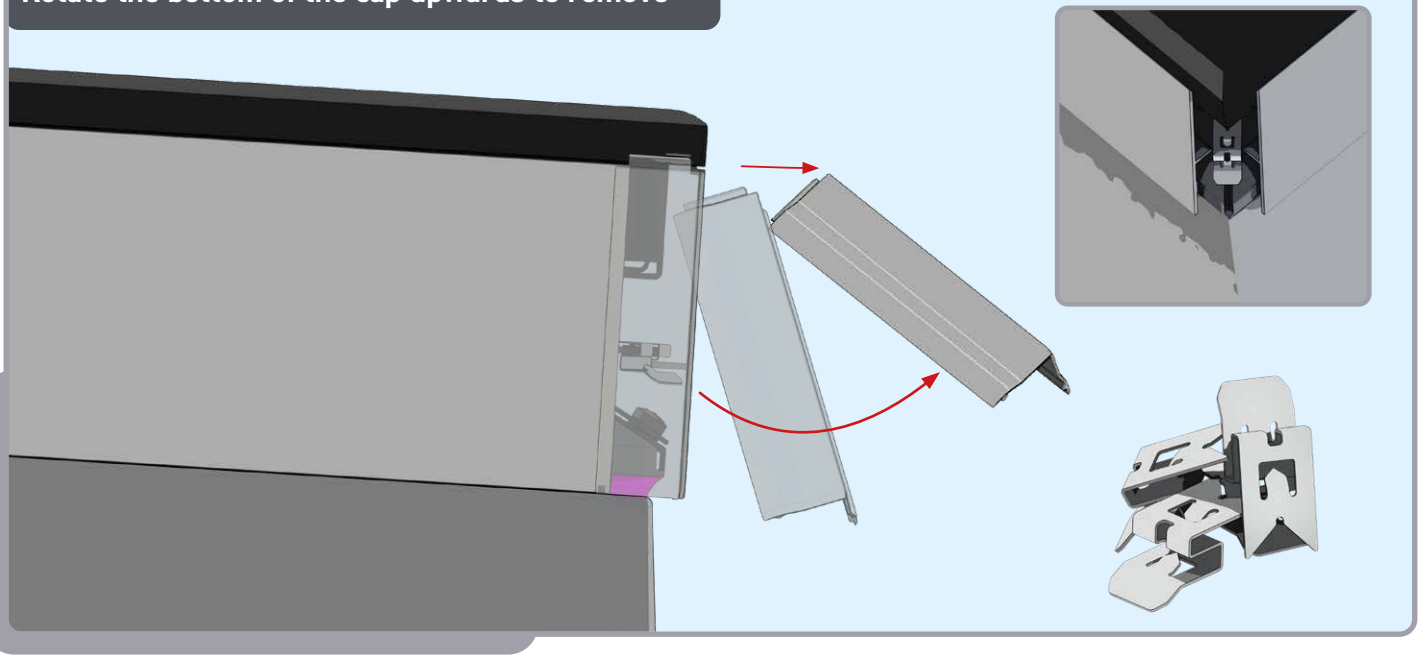


Remove clips and keep for re-install


REMOVE EXTERNAL FASCIA'S

2

Remove all external fascia

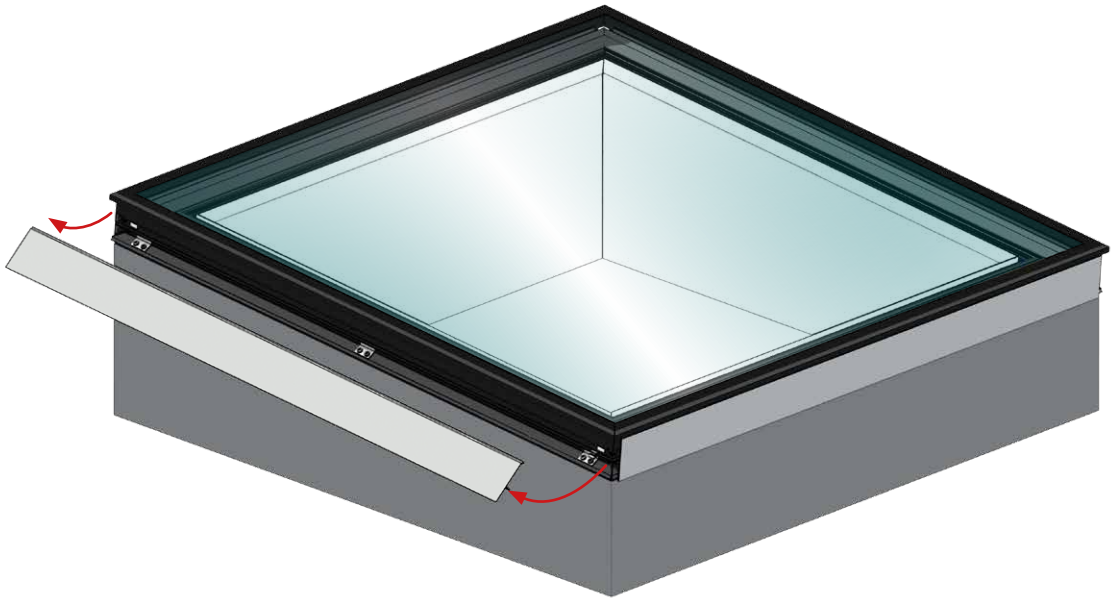


Pull from the bottom rotating the fascia

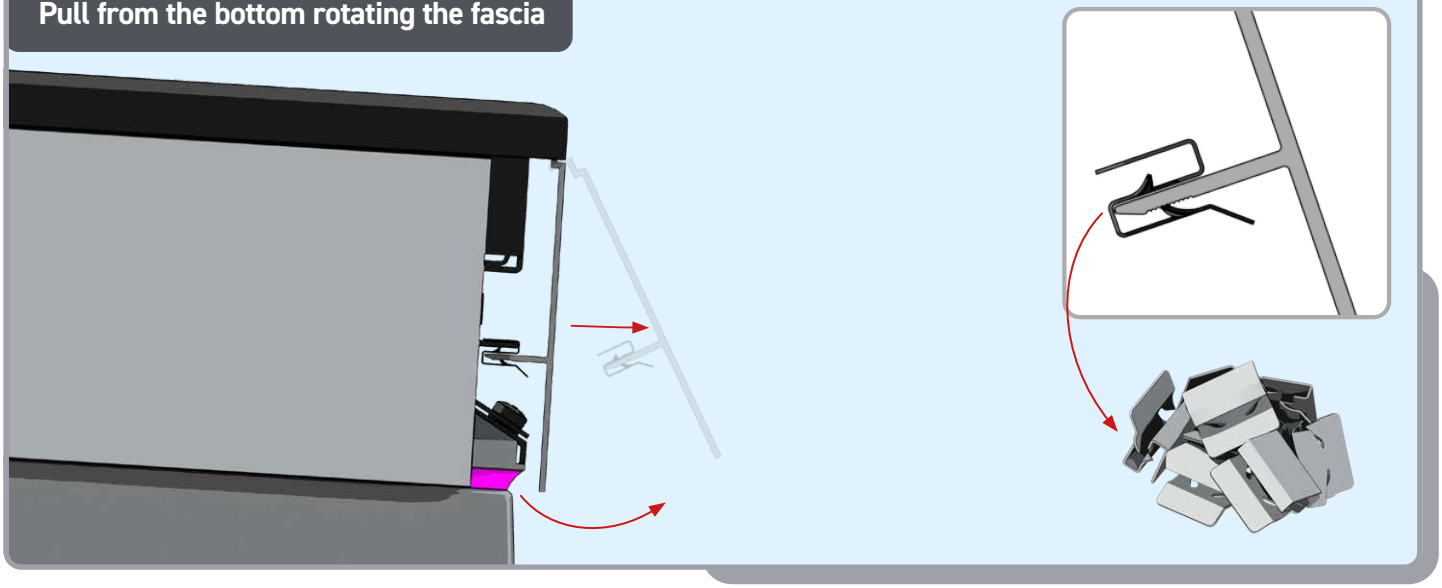


Remove clips and keep for re-install

REMOVE SECURITY SCREWS

3

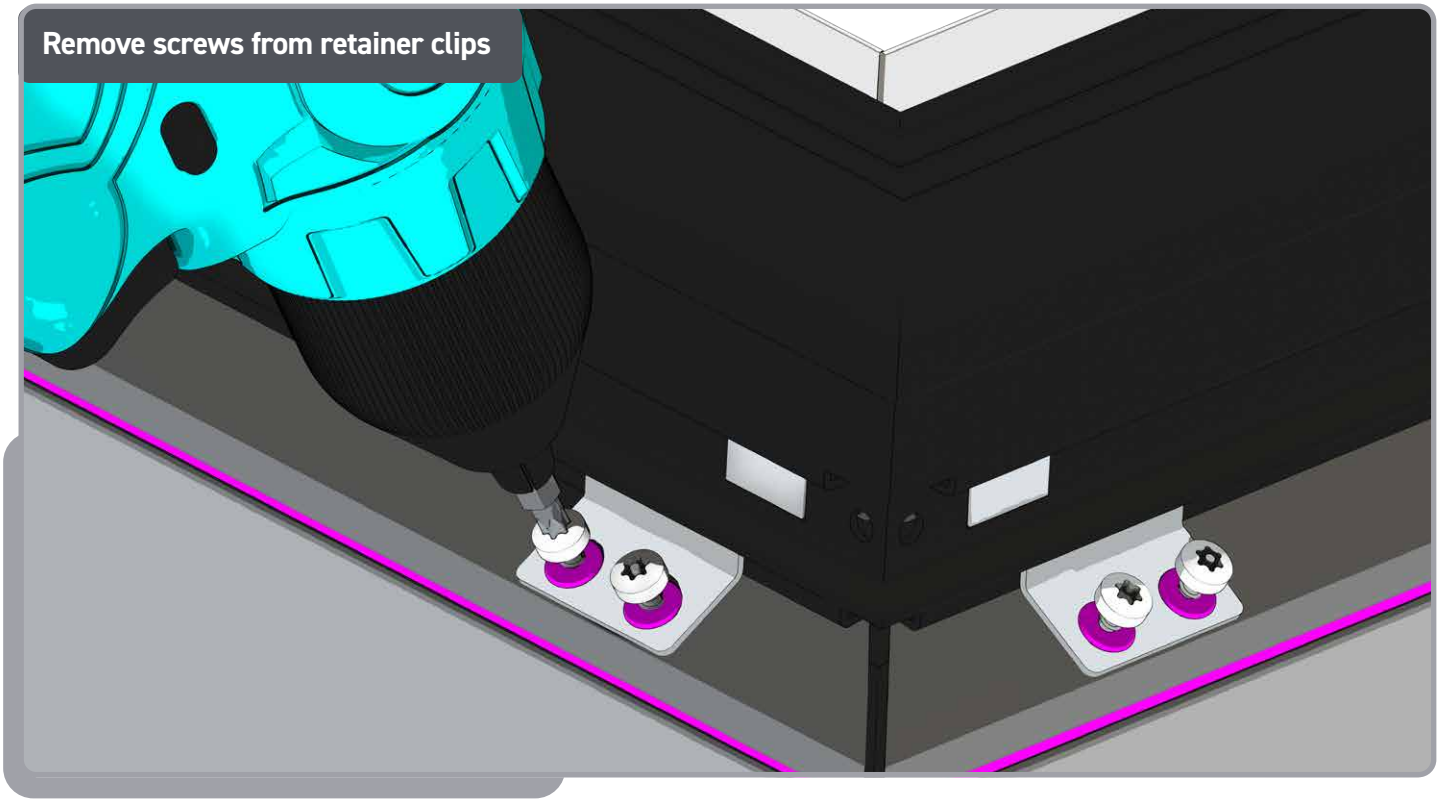

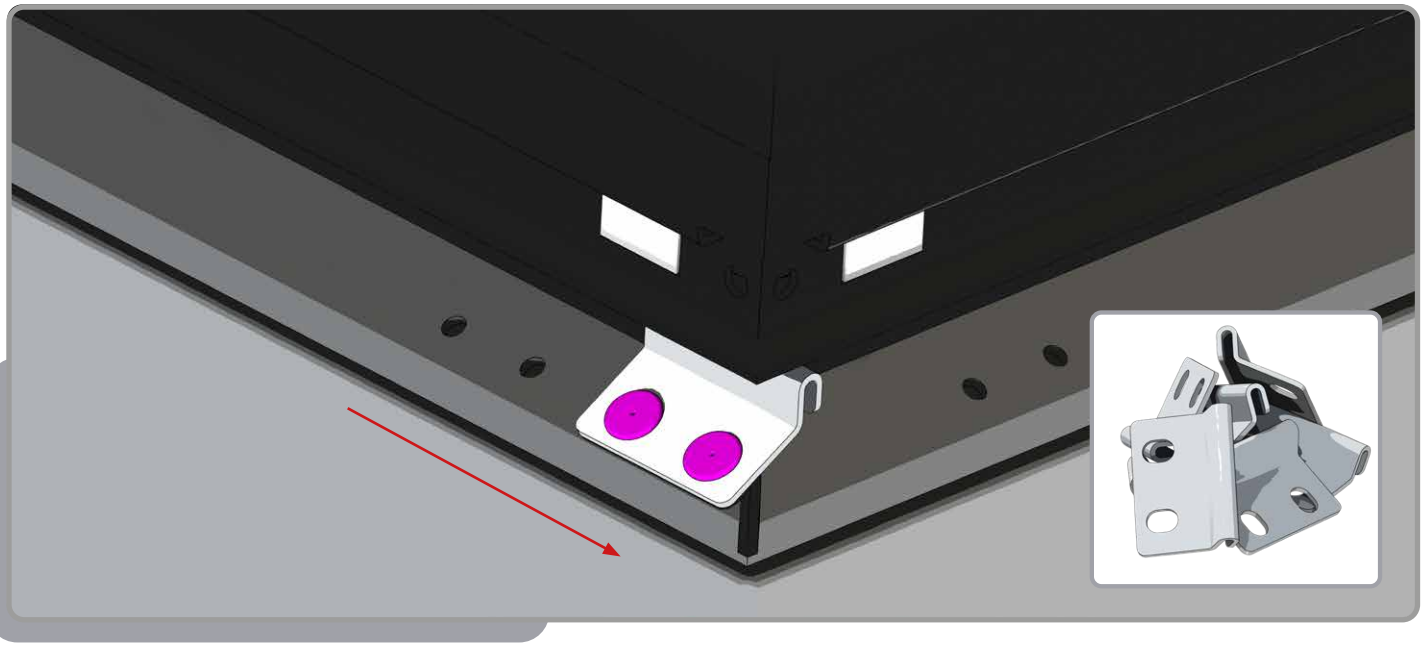



Remove steel brackets and keep for re-install

REMOVE GLAZING UNIT

4

Lift off the glazing unit

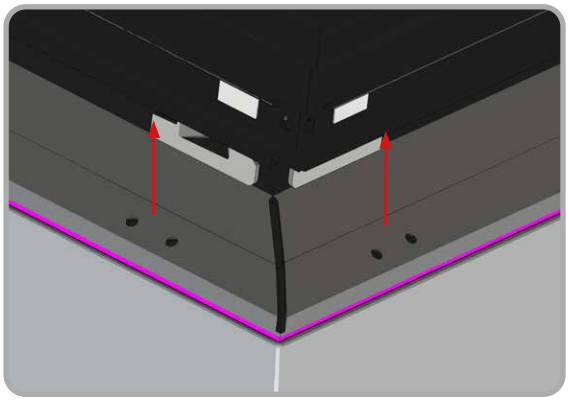

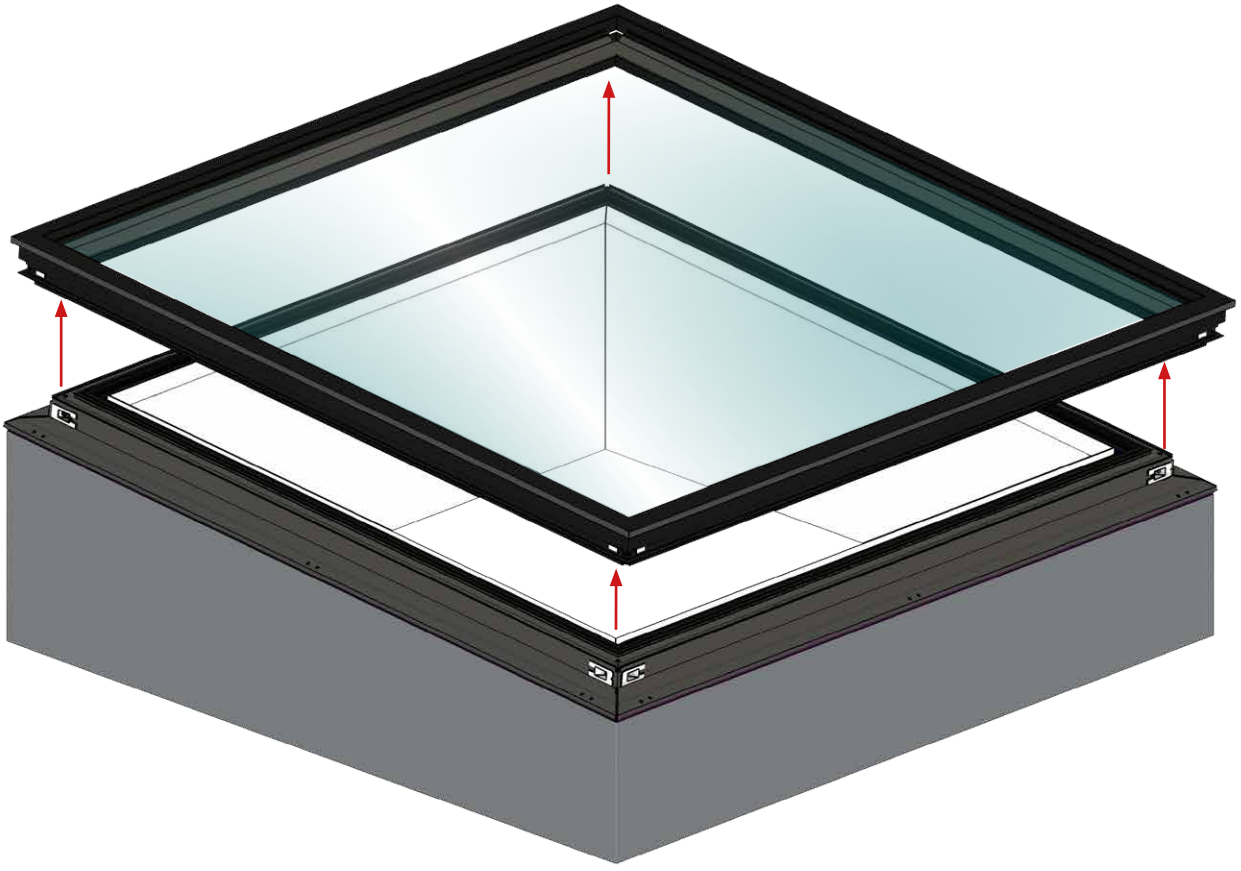

Store safely to avoid damage


REMOVAL OF GLAZING RETAINERS

5





1.5mm and 2.5mm hex key

Using a 1.5mm hex key loosen the corner key grub screws

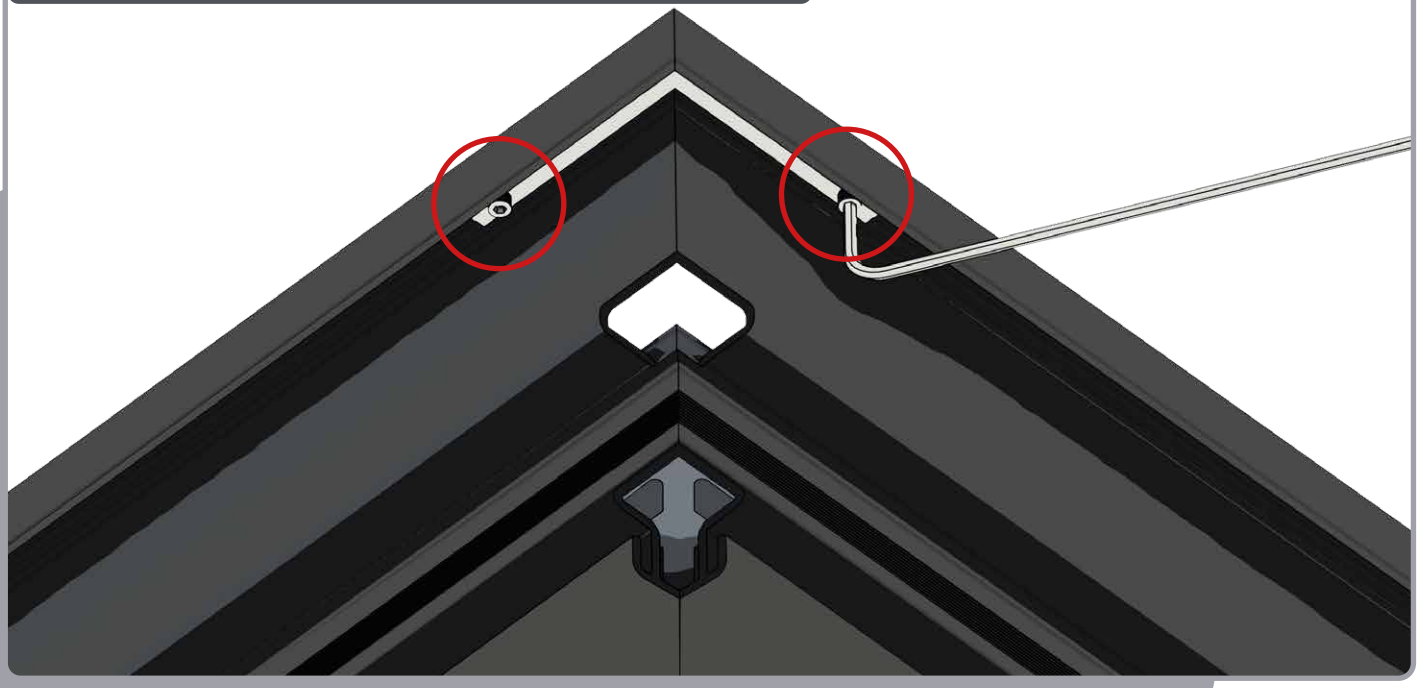


Using a 2.5mm hex key loosen and remove the pawls

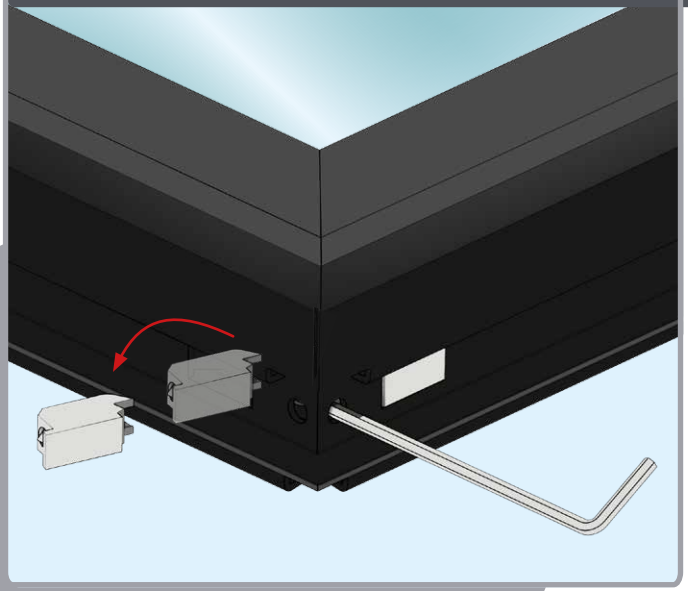


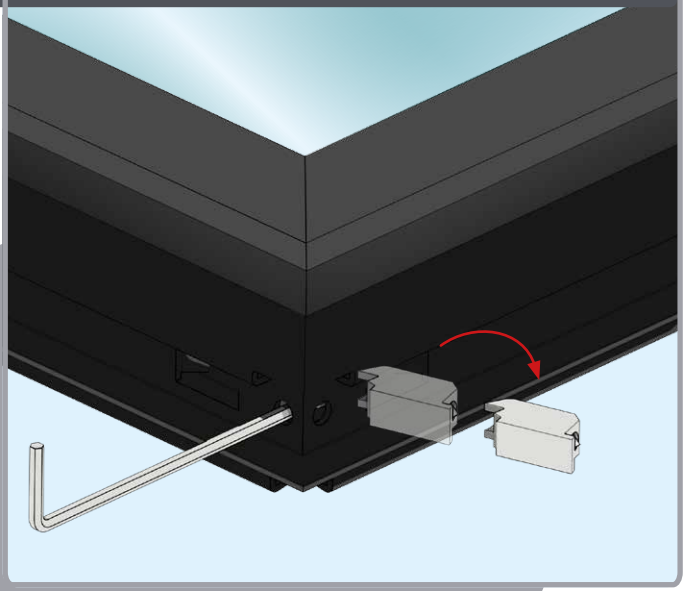

Repeat this process on all corners of the unit. Retain Pawls for reinstall

Remove the glazing retainers

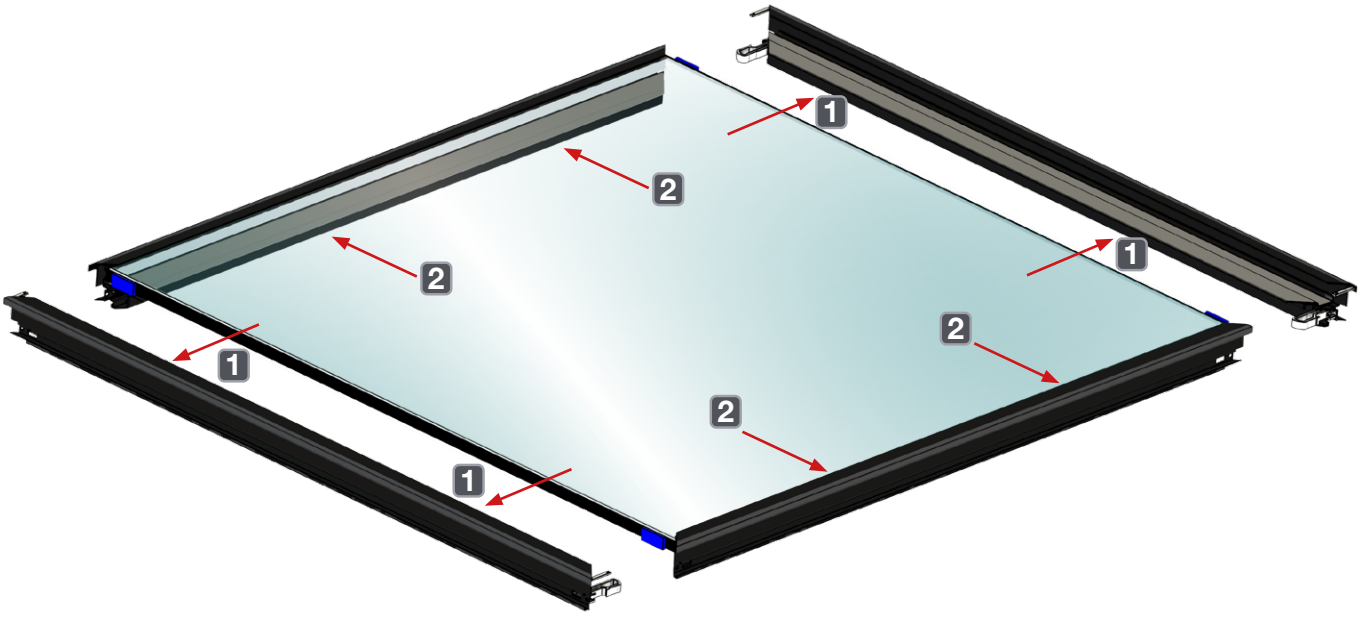


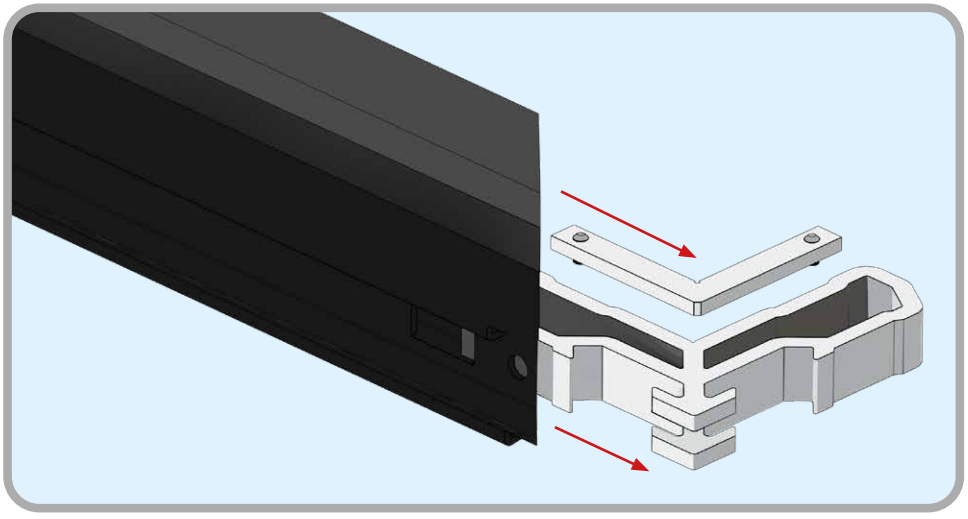

Remove corner keys and cleats, keep for re-install


RE-FITTING GLASS UNIT AND RETAINERS

6

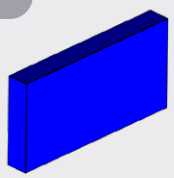


Before installing check glazing retainers for shards of glass or debris. Clean if necessary.


Place the provided packers onto each corner of the glass panel

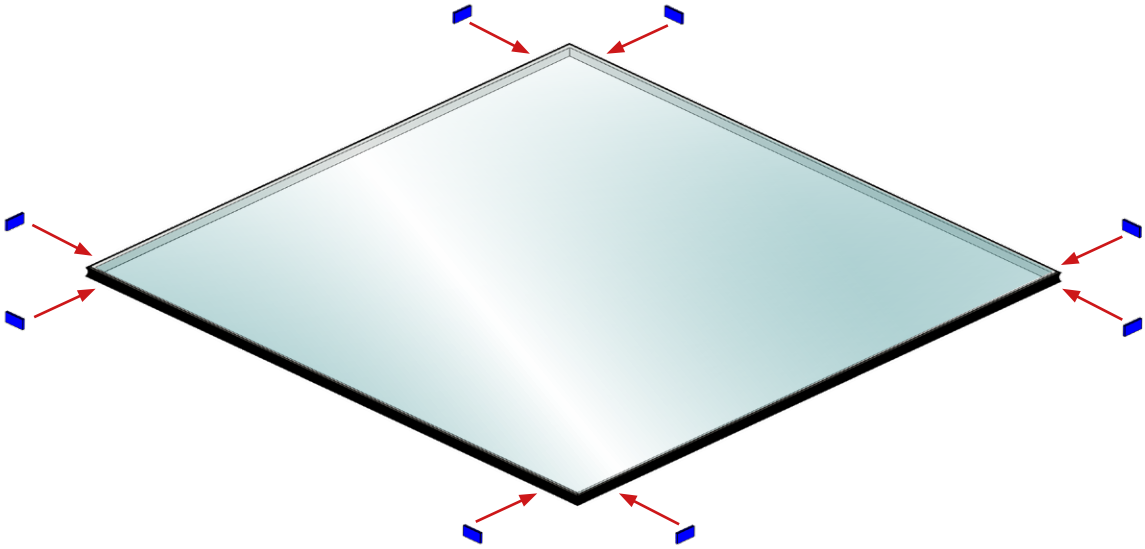


Set the packers 20mm in from the corners of the unit

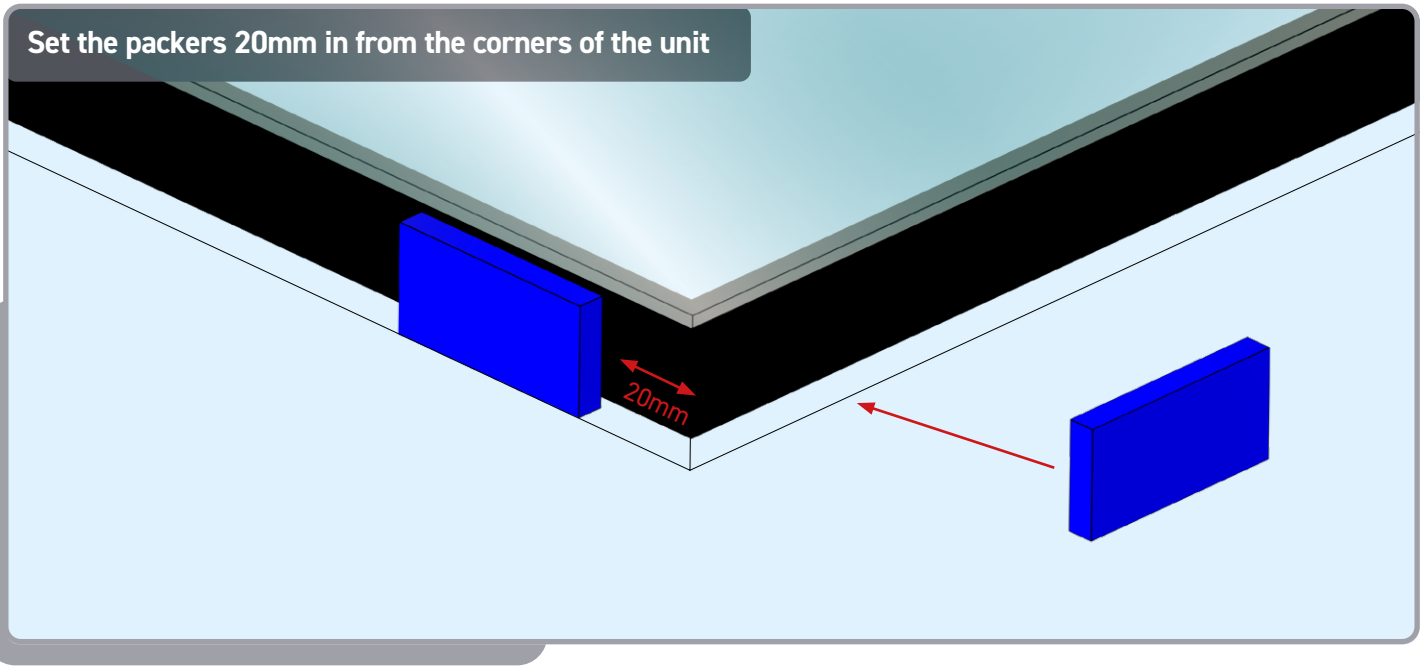



Push on the two glazing retainer widths

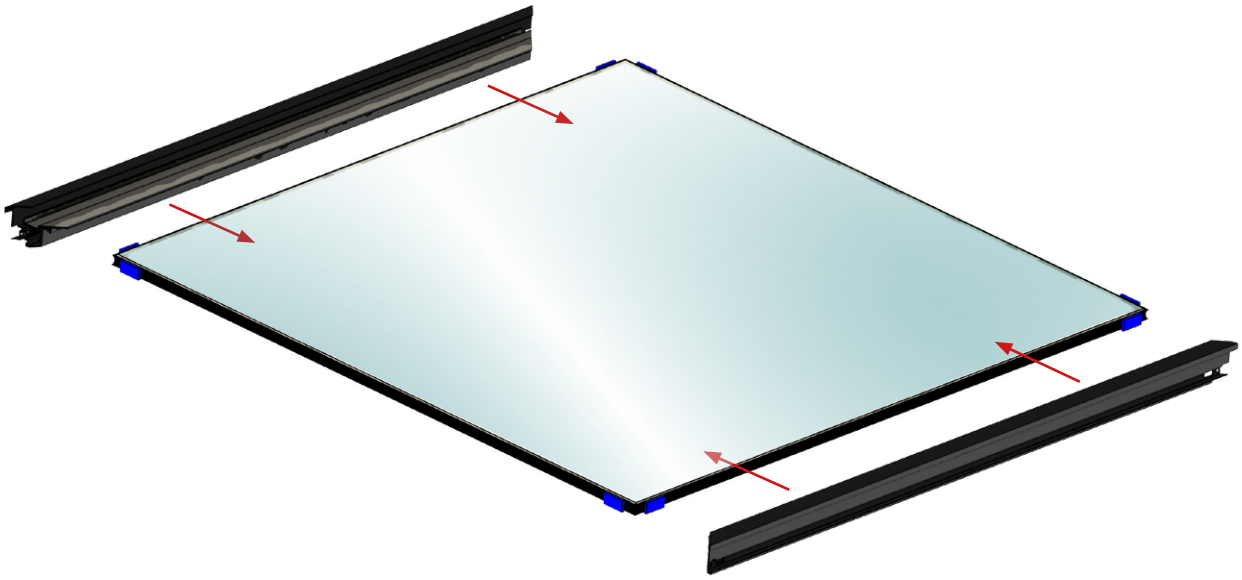

Ensure the corner key is correct way up and cleat aligns. Then fit the two glazing retainer lengths

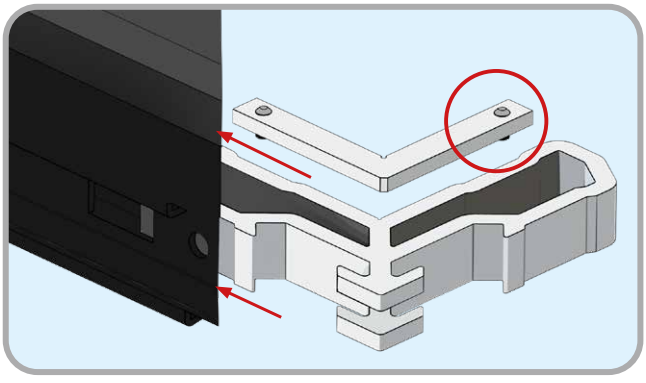

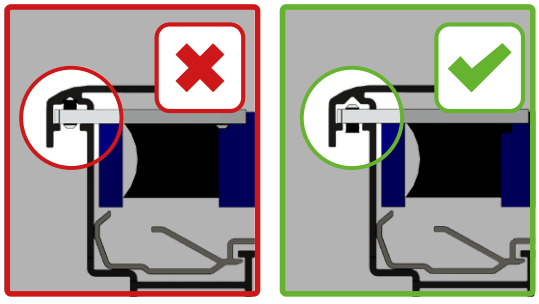

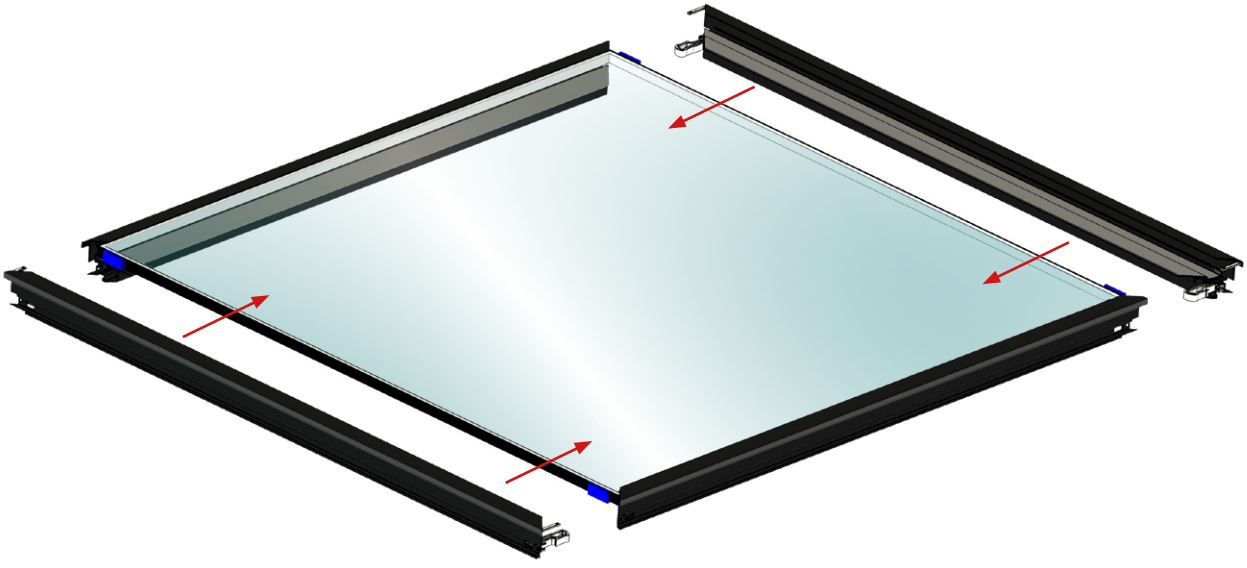


RE-FITTING GLAZING RETAINERS


7




1.5mm and 2.5mm hex key


Insert pawls into corner cleats

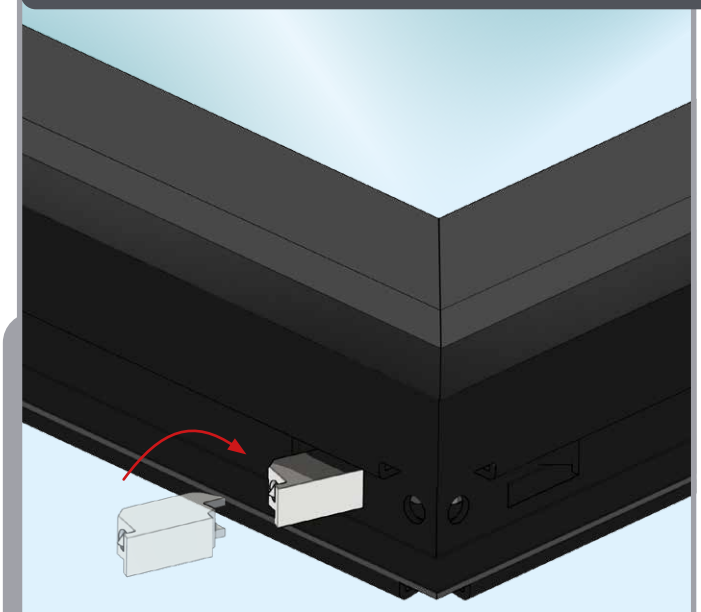

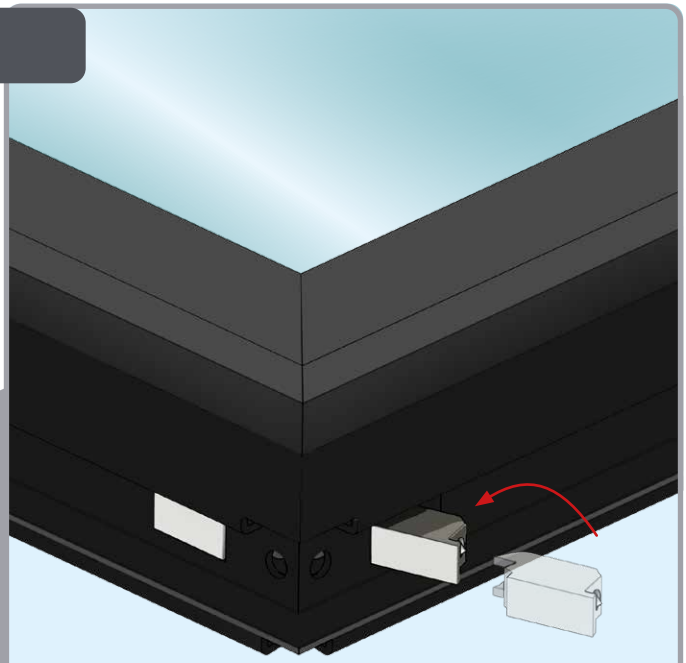



Using 2.5mm hex key tighten pawls so that the profiles edges sit flush

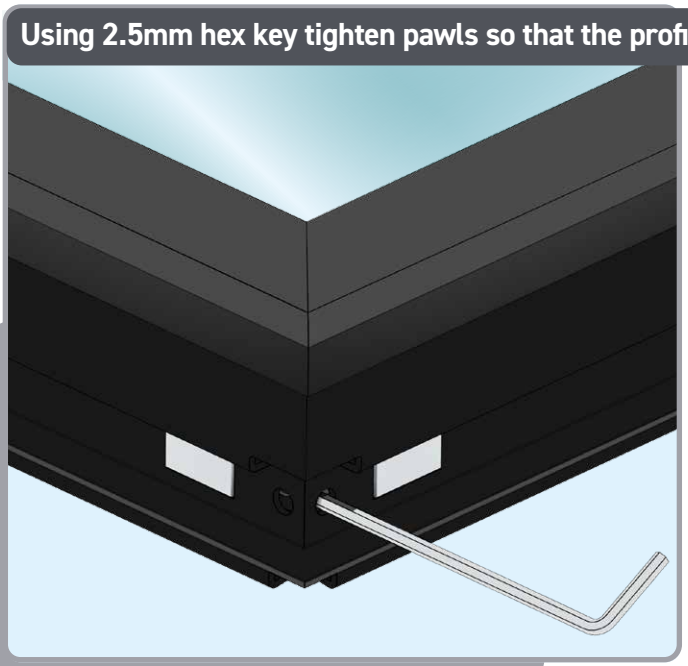

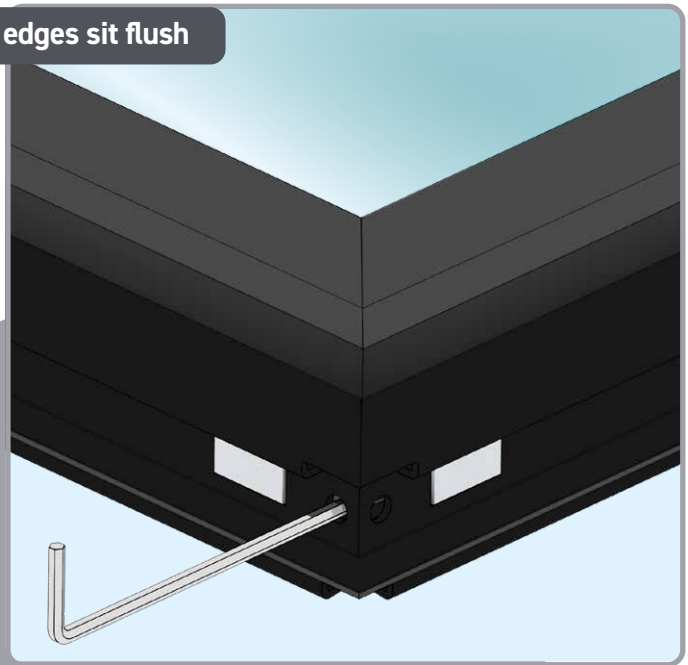


Adjust the pawls until profiles sit flush to each other

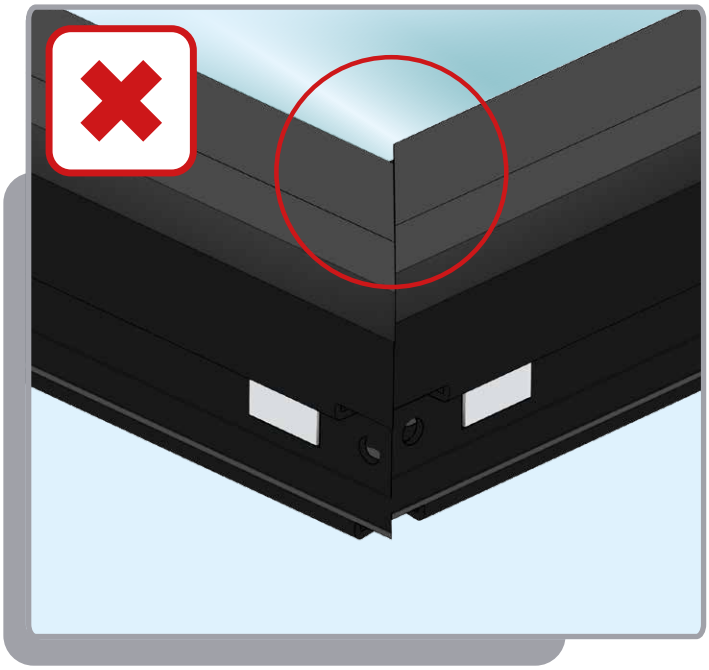

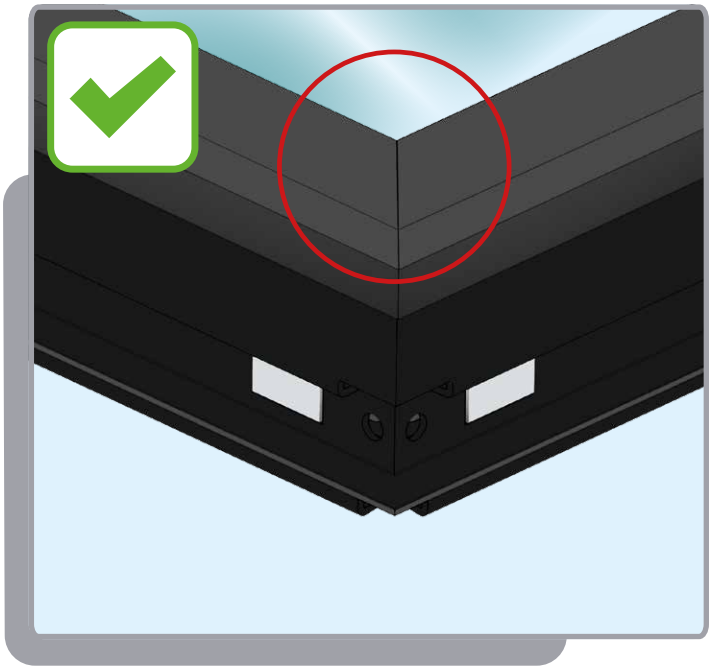

Using 1.5mm hex key, tighten the corner key grub screws to hold profiles in place

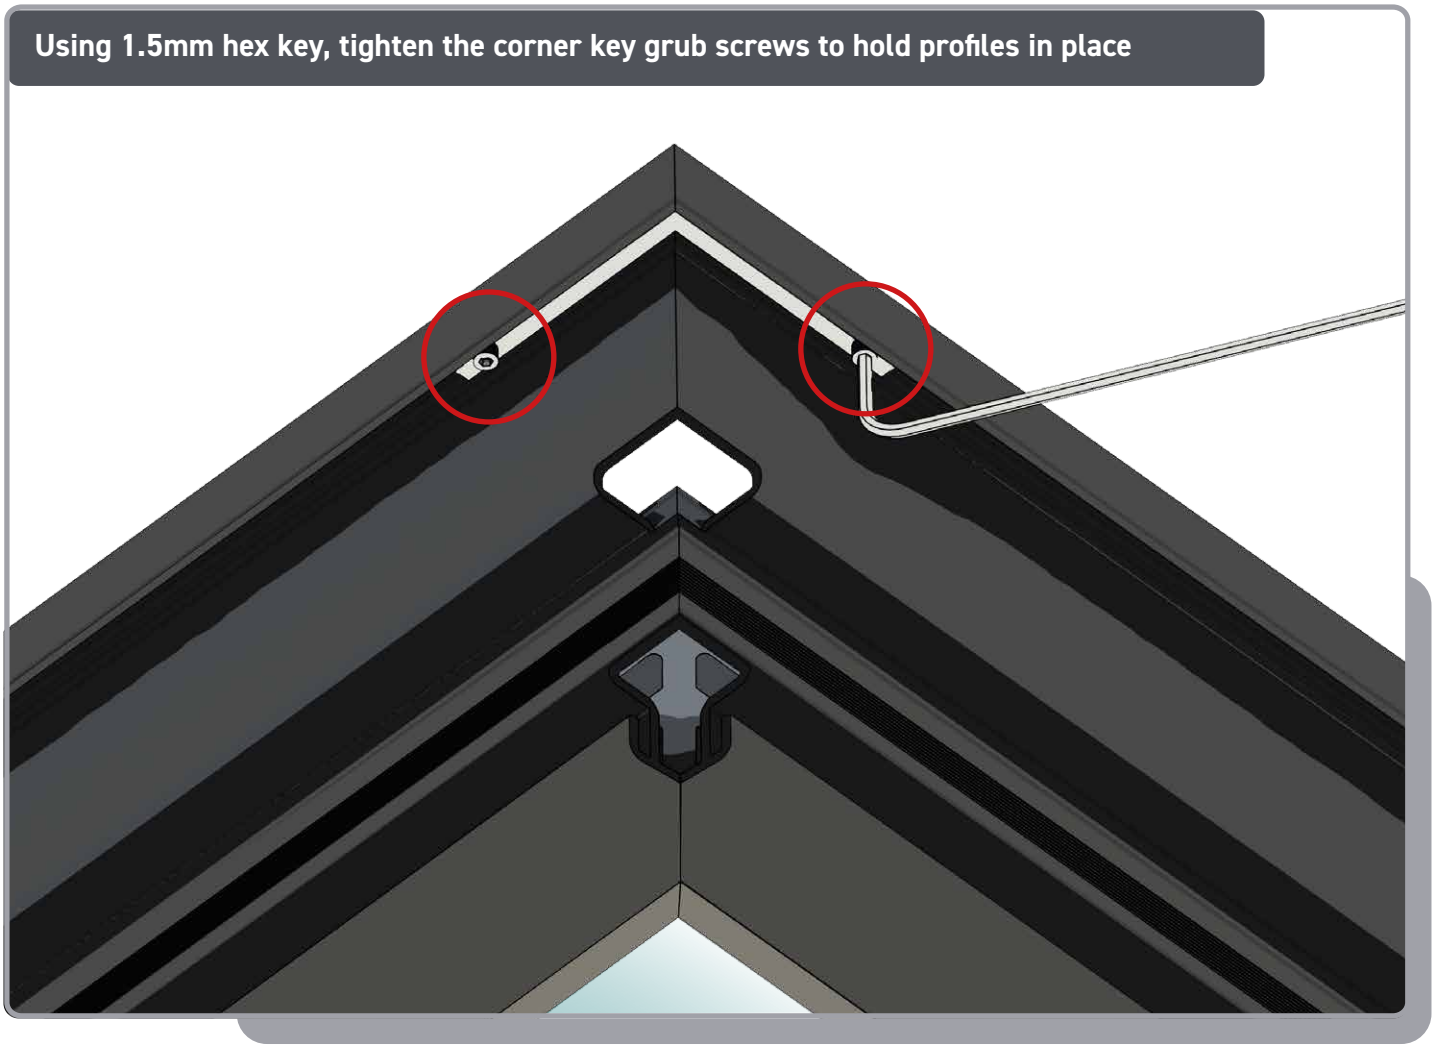



FITTING GLAZING UNIT

8




Place the glazing unit onto upstand

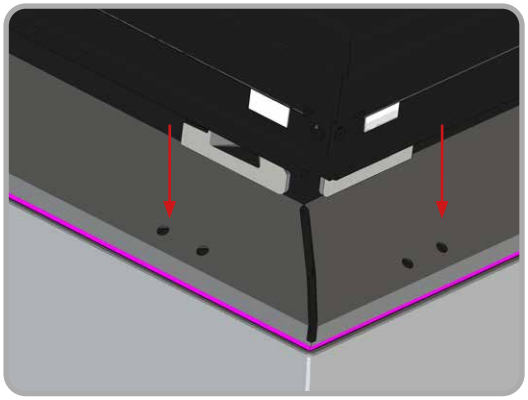

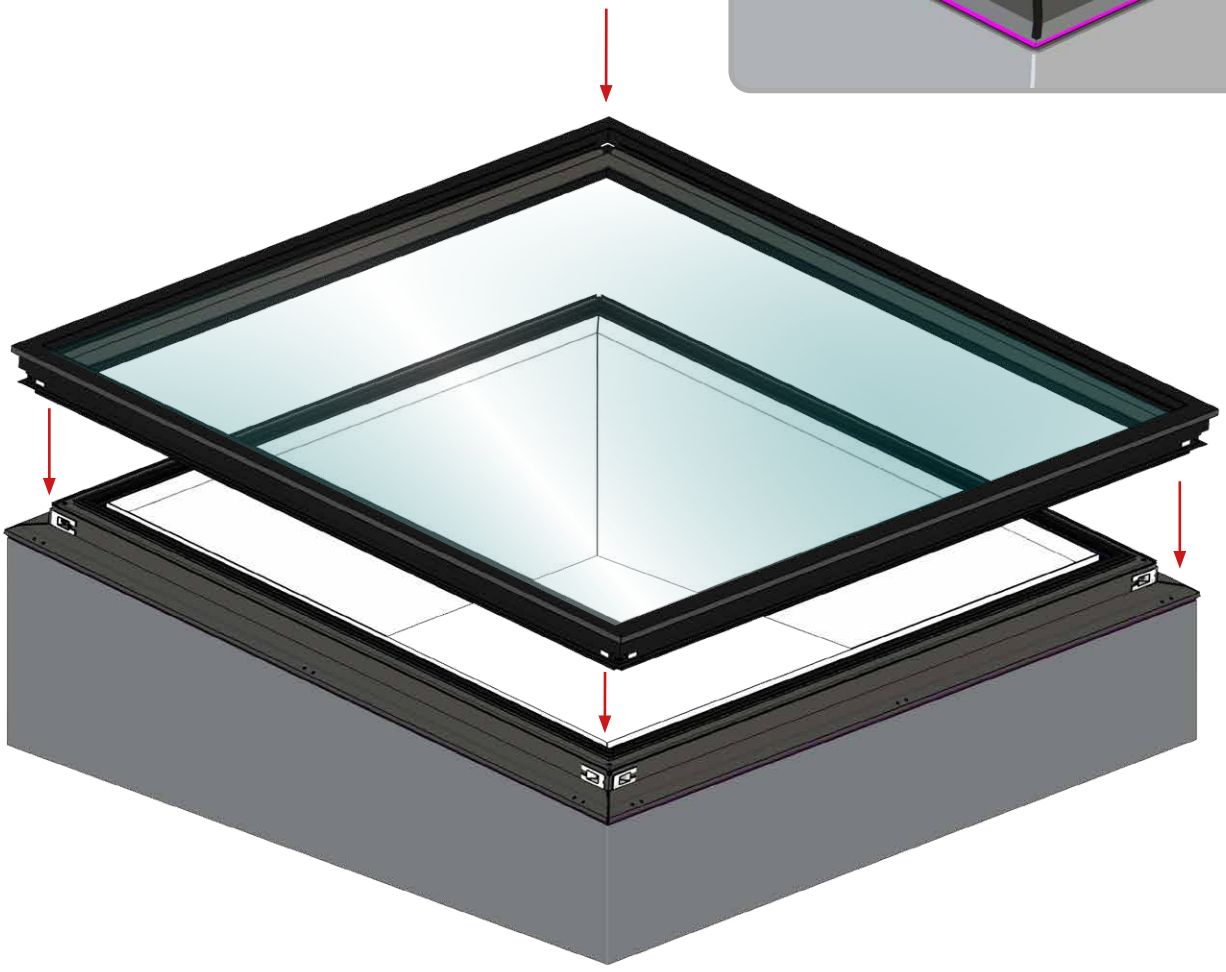



FIXING FLAT GLASS UNIT

9

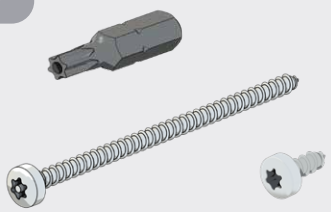


Slide steel brackets into place

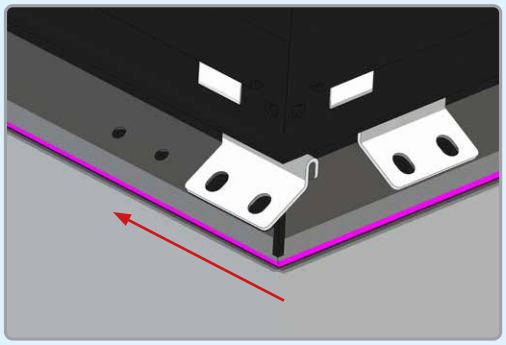

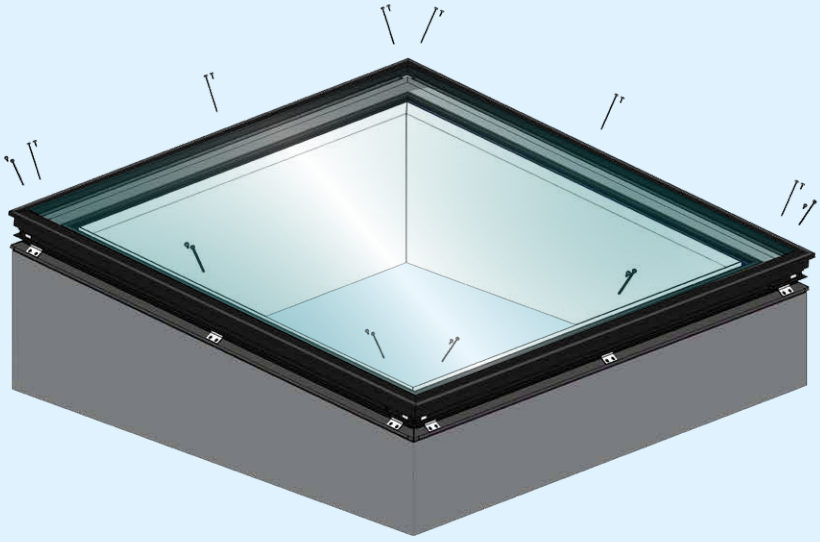


Apply sealant to drilled holes and security screws before fixing down

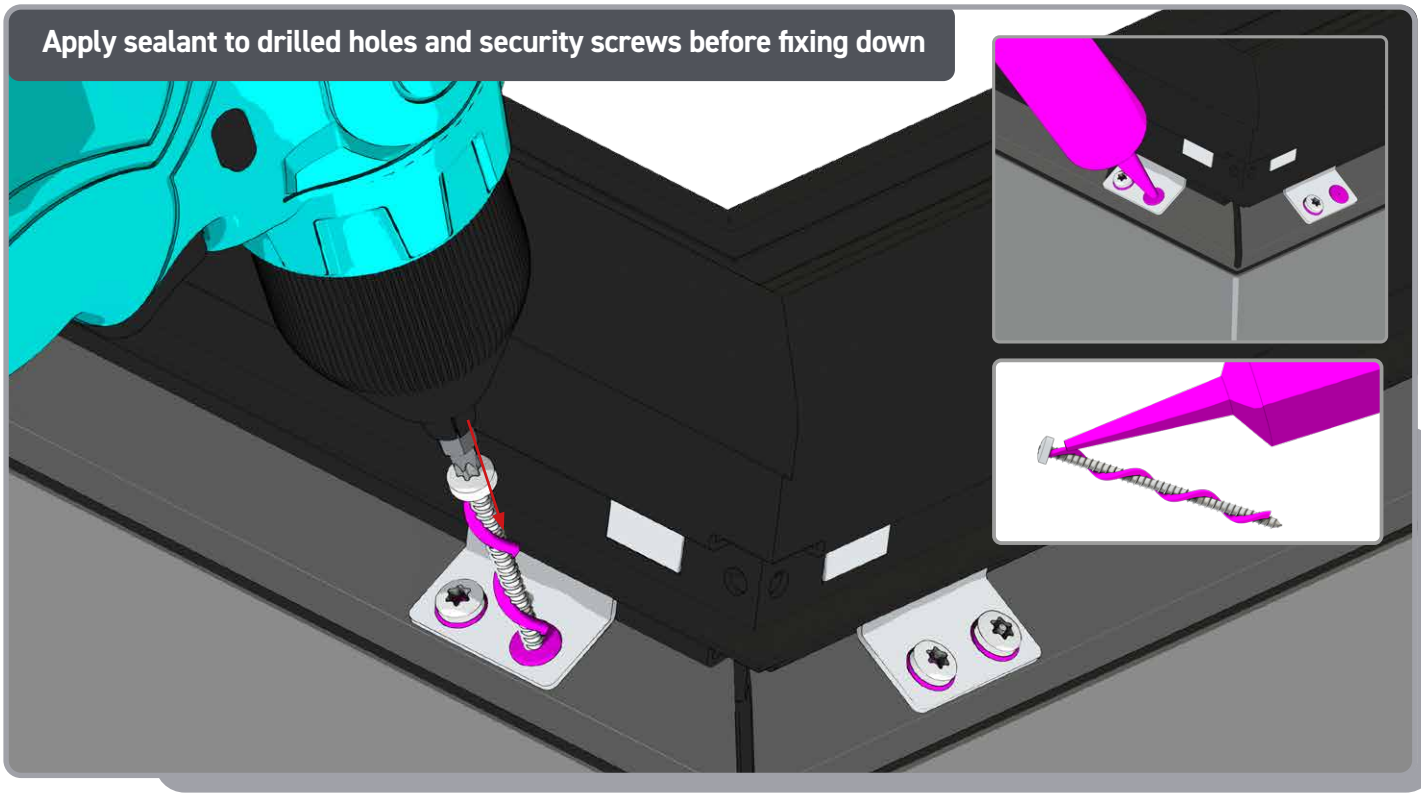


INSTALL EXTERNAL FASCIA'S


10

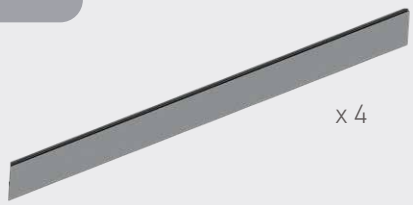


Align fascia's with S clips

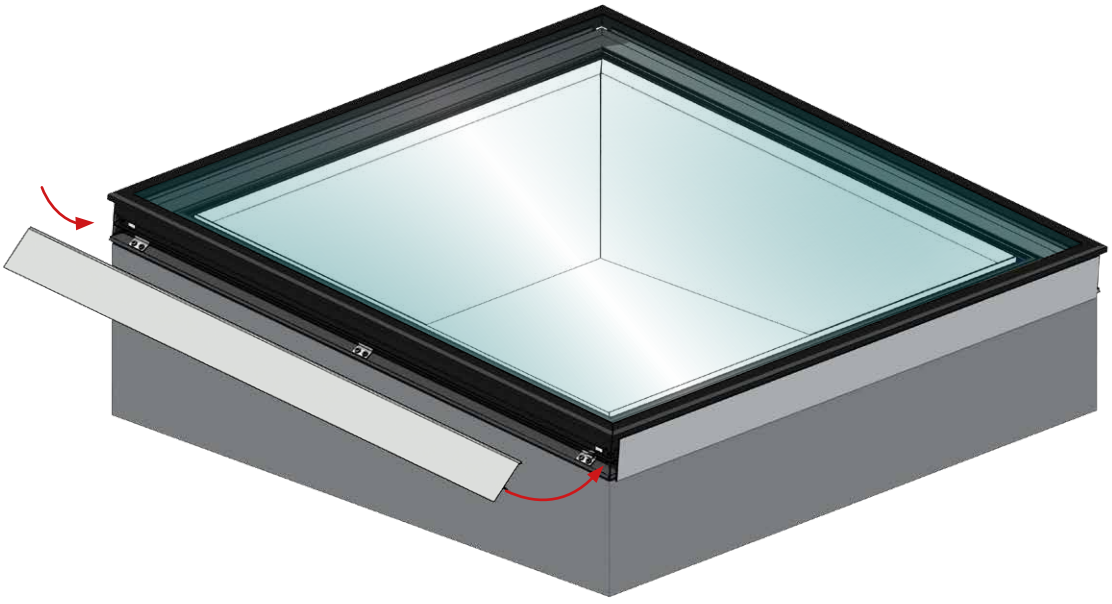

Push clips onto Glazing retainer before installing Fascia

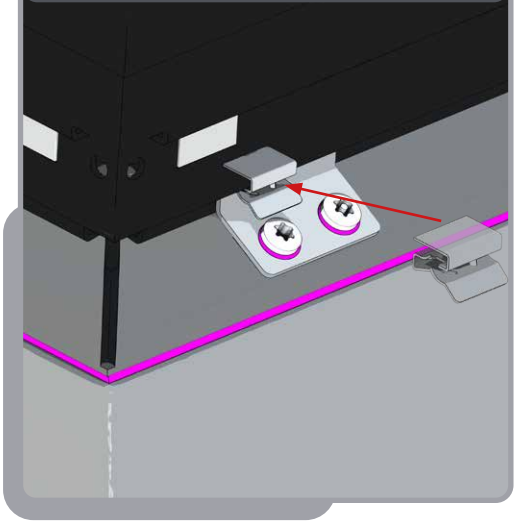


Check alignment before pushing into place

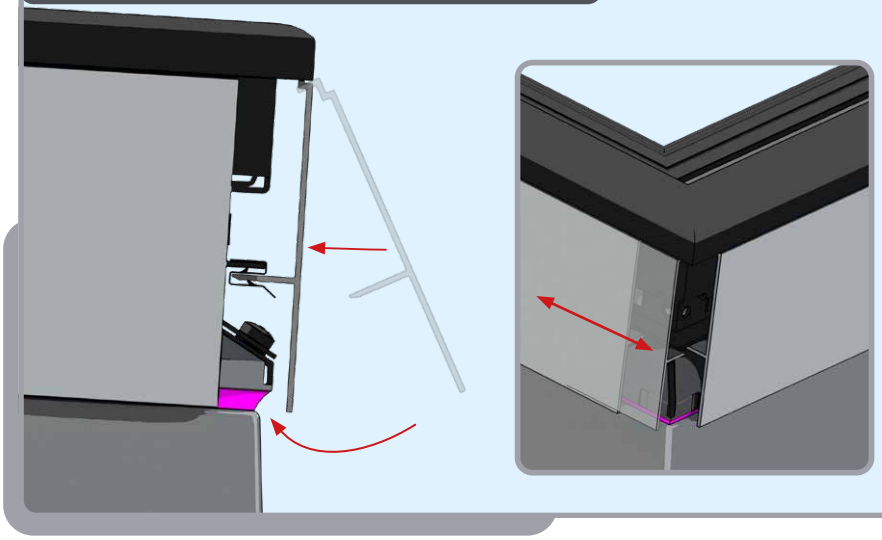

INSTALL CORNER CAPS


11




x 4


Re-fit corner cap clips before fitting caps

Re-fit all corner caps

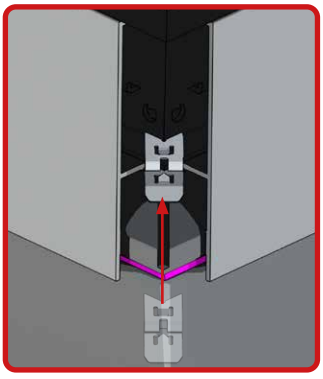

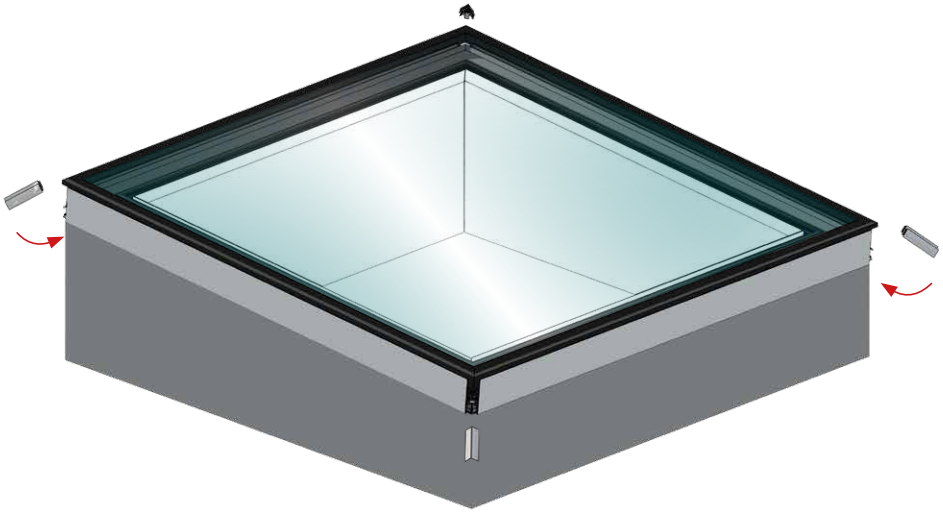

Position top edge of the end cap before rotating into position

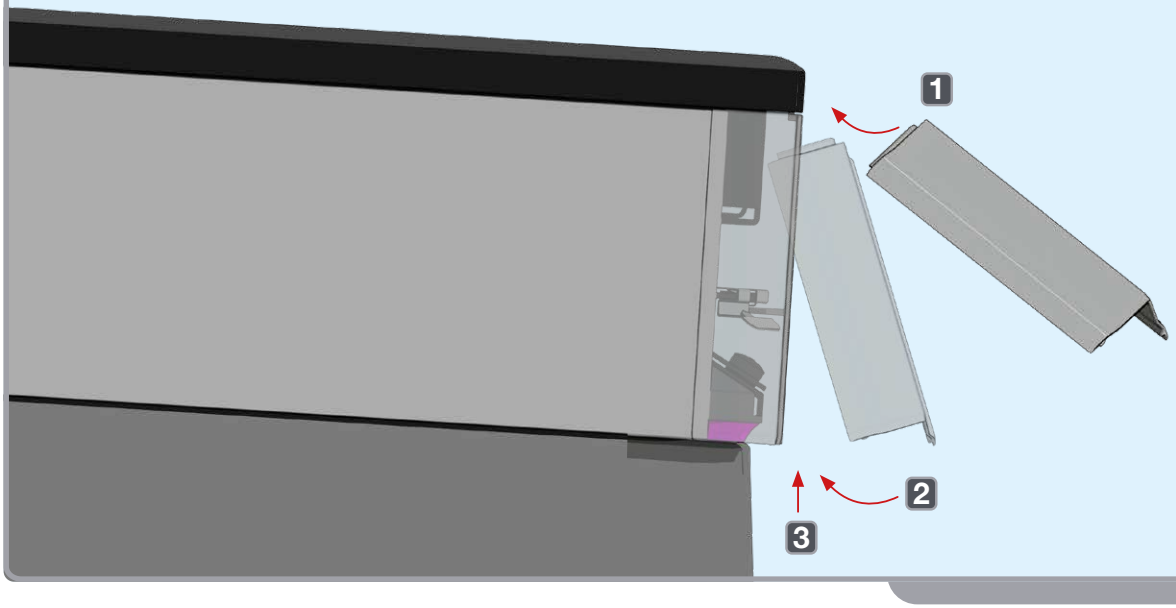

KORNICHE

www.korniche.co.uk